

CZ montážní návod

Před zahájením instalace si prosím pozorně přečtěte uvedené pokyny.
Návod si ponechte v případě nutnosti dalšího použití.

EN installation instruction

Please read and understand all of the directions, before starting luminaire installation. Keep this instruction for future use.

CZ**POZOR!**

NEBEZPEČÍ ÚRAZU
ELEKTRICKÝM PROUDEM

Světelný zdroj v tomto svítidle smí vyměnit pouze výrobce nebo jeho smluvní servisní technik nebo podobně kvalifikovaná osoba.

Montáž svítidel může provádět pouze autorizovaná osoba. Ujistěte se, že svítidlo je vždy před instalací odpojeno od elektrického napětí. Svítidlo musí být instalováno v souladu se všemi bezpečnostními požadavky a dle postupu, který je uveden v tomto návodu. Přesný model svítidla je uveden na štítku na svítidle.

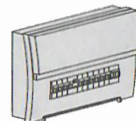
Normal Operation: The green LED indicator stays on when connected to mains supply. The indicator will turn off when the mains supply fails, or when the internal charger malfunctions, or when the luminaire is in test mode.

Battery: rechargeable battery pack. Battery should be replaced when it reaches the end of its lifetime. To avoid damage to the luminaire and ensure its performance, the battery should be replaced with same type.

Test Switch: Press the test button, LED indicator will turn off and the luminaire will be powered by the battery pack. The light source is non-replaceable. When the light source reaches the end of its lifetime, the whole luminaire shall be replaced.

Installation Procedure**WARNING**


1. Switch off before installation or maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.
4. This luminaire is not intended for use in high-risk task area lighting.




**Turn Off
Power Supply**

Recessed Mount


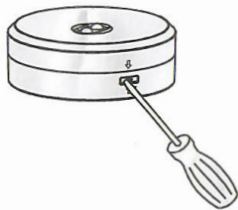
1. Open the fixture using flat blade screwdriver.



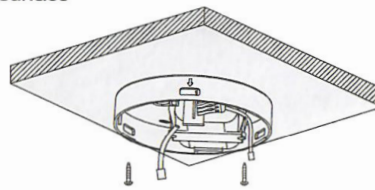
2. Pull out AC cable connector from PCBA, knock out cable entry on back plate and install back plate on appropriate ceiling surface



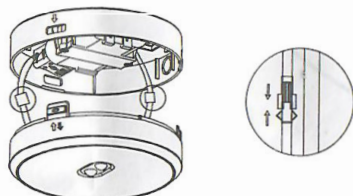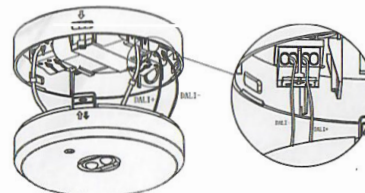
3. AC Power supply wiring, brown wire connects to L, blue wire connects N.






**DALI Wiring**



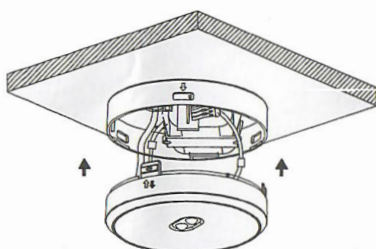
4. Fix the luminaire into ceiling.



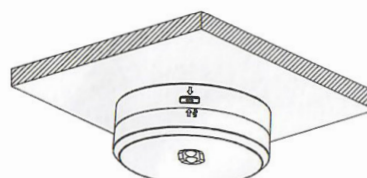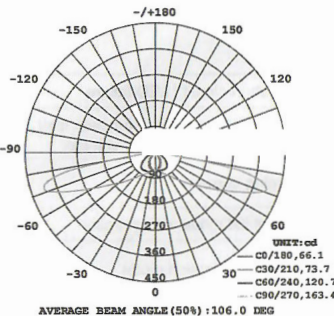5. Switch on, the green LED indicator will light up.



Oval lens for pathway application  AVERAGE BEAM ANGLE (50%): 106.0 DEG	Mounting height				
	3W	Spacing (C0)		Spacing (C90)	
	2.5m	2.68m	5.7m	10m	21m
	3.0m	2.8m	6.5m	10.5m	24m
	3.5m	2.9m	7.3m	11.2m	25m
	6W	Spacing (C0)		Spacing (C90)	
	2.5m	3.1m	6.5m	11.2m	22.6m
3.0m	3.4m	7.2m	12.3m	25.3m	
3.5m	3.5m	7.8m	13.2m	28m	

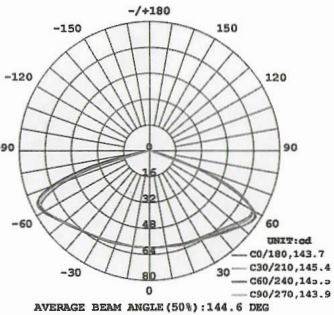Round lens for pathway application  AVERAGE BEAM ANGLE (50%): 144.6 DEG	Mounting height		
	3W	Spacing (C0/C90)	
	2.5m	5.4m	11.9m
	3.0m	5.7m	12.8m
	3.5m	5.9m	13.5m
	6W	Spacing (C0/C90)	
	2.5m	5.9m	12.8m
3.0m	6.4m	14m	
3.0m	6.9m	15.2m	

Instructions for automatic test option

1. Instruction for Automatic test function
- Once the unit is powered up, a self-diagnostics test will be automatically initiated:
- Check battery, lamp, charge board and transfer fault all the time.
 - Run 3mins duration test every month.
 - Run 1H or 3H duration test every year.
- Note: All test functions are preset and no need field adjustment.

•	One flash, 4s pause	Battery disconnected
••	Two flashes, 4s pause	Low battery voltage
•••	Three flashes, 4s pause	Charge board fault
••••	Four flashes, 4s pause	AC/DC transfer fault
•••••	Five flashes, 4s pause	LED lamp fault

Note: When the fault is recovered, press the test button for 2s, the red flashing indicator will turn green. The fault is cleared, and the unit is back to normal.

2. Dual Colour LED Status Indicator Meaning
- Green indicator solid on: Ready/ Normal Operation
 - Red indicator flashes: Require service

Press test button once	run a 30s duration test
Press test button twice within 2s	run a 3mins duration test
Press test button 3 times within 2s	run a 30mins duration test
Press test button 4 times within 2s	run a 1H or 3H duration test



CZ / DŮLEŽITÉ INFORMACE PRO SPRÁVNOU
LIKVIDACI PRODUKTU V SOULADU SE
SMĚNICEMI

Výrobek nesmí být na konci své životnosti likvidován jako komunální odpad. Je nutné jej odevzdat do speciálního místního sběrného střediska pro tříděný odpad nebo k prodeji, který tuto službu poskytuje. Likvidace spotřebiče tímto předchází možným negativním dopadům na životní prostředí a zdraví a zdraví vyplývajícím z nesprávné likvidace materiálů pro dosažení významných úspor energie a zdrojů. Jako připomínka nutnosti samotné likvidace domácích spotřebičů je výrobek označen přeškrtnutou popelnicí.